



# Supplemental Tile Instructions

## Additional Parts

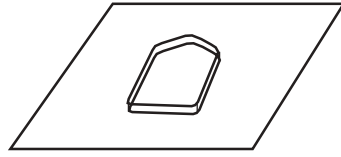

30" x 30"  
Aluminum Flashing

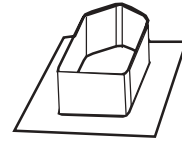

Commdeck Base  
with 6" Collar

Follow installation instructions in standard install booklet to determine Line of Sight. After determining the location, mark your location directly on the roof. Remove Cover from base unit and slide Aluminum flashing off of the base unit.



- 1) Place Commdeck directly onto roof deck over marked location. Bottom of Base unit should sit on roof deck just above top edge of tile.
- 2) Use 2" truss head screws in prepunched holes to secure base unit directly to deck.



- 1) Slide aluminum flashing onto base unit to determine your tile height.
- 2) Mark flashing height on all sides of the base collar & remove aluminum flashing.
- 3) Place bead of mastic along height marking, and press aluminum flashing onto base.



- 1) Form the flashing to match shape tile profile.
- 2) Once flashing is formed apply another bead of mastic where collar and flashing meet to seal flashing to base unit.



- 1) Replace tile over flashing.
- 2) Pull cable through attic and continue to follow final assembly directions in booklet.

